



**Storage Electric Water Heater
FASHION SERIES**

USER MANUAL

**D30-15EFG
D50-15EFG
D80-15EFG
D100-15EFG**

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details.
The diagram above is just for reference. Please take the appearance of the actual product as the standard.

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

EN

CONTENTS

THANK YOU LETTER	01
SAFETY INSTRUCTIONS	02
SPECIFICATIONS	04
PRODUCT OVERVIEW	04
QUICK START GUIDE	06
PRODUCT INSTALLATION	07
OPERATION INSTRUCTIONS	09
CLEANING AND MAINTENANCE	11
TROUBLESHOOTING	12
TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT	13
DISPOSAL AND RECYCLING	13
DATA PROTECTION NOTICE	14

SAFETY INSTRUCTIONS

EN

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

Explanation of Symbols



Warning

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



Attention

The signal word indicates important information (e.g. damage to property), but not danger.



Caution

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

CAUTION


Before installing this water heater, check and confirm that the earthing on the supply socket is reliably grounded. Otherwise, the electrical water heater can not be installed and used. Do not use extension boards. Incorrect installation and use of this electrical water heater may result in serious injuries and loss of property.

Special Cautions

- The supply socket must be earthed reliably. The rated current of the socket shall not be lower than 10A. The socket and plug shall be kept dry to prevent electrical leakage.
- The installation height of the supply socket shall not be lower than 1.8m.
- The wall in which the electrical water heater is installed shall be able to bear the load more than two times of the heater filled fully with water without distortion and cracks. Otherwise, other strengthening measures shall be adopted.
- The pressure relief valve attached with the heater must be installed at the cold water inlet of this heater (see Fig.1).
- When using the heater for the first time (or the first use after maintenance), the heater can not be switched on until it has been filled fully with water. When filling the water, at least one of the outlet valves at the outlet of the heater must be opened to exhaust

the air. This valve can be closed after the heater has been filled fully with water.

- The water heater is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the heater.
- During heating, there may be drops of water dripping from the pressure release hole of the pressure relief valve. This is a normal phenomenon. If there is a large amount of water leak, please contact customer care center for repair. This pressure release hole shall, under no circumstances, be blocked; otherwise, the heater may be damaged, even resulting in accidents.
- The drainage pipe connected to the pressure release hole must be kept sloping downwards.
- Since the water temperature inside the heater can reach up to 75°C, the hot water must not be exposed to human bodies when it is initially used. Adjust the water temperature to a suitable temperature to avoid scalding.
- If the flexible power supply cord is damaged, the special supply cord provided by the manufacturer must be selected, and replaced by the professional maintenance personnel.
- If any parts and components of this electrical water heater are damaged please contact customer care center for repair.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The water may drip from the discharge pipe of the pressure-relief device and that this pipe must be left open to the atmosphere; The pressure-relief device is to be operated regularly to remove lime deposits and to verify that it is not blocked;
- In order to drain away the water inside the inner container, it can be drained away from the pressure release valve. Twist the thread screw of the pressure release valve off, and lift the drain handle upwards. (See Fig.1) A discharge pipe connected to the pressure-relief device is to be installed in a continuously downward direction and in a frost-free environment.

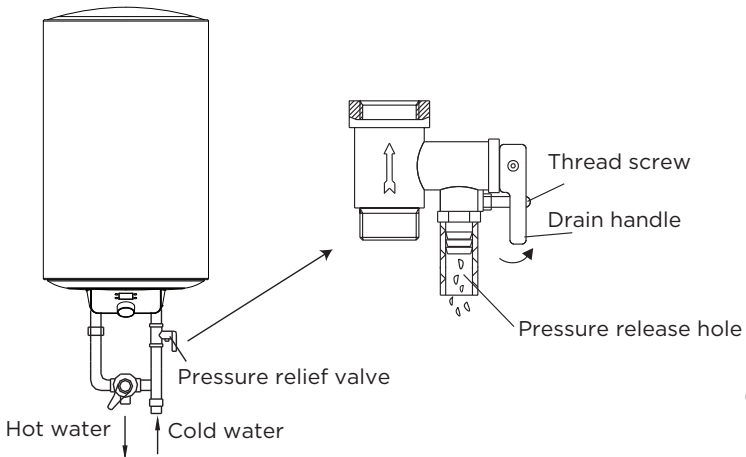

(Fig.1)


SPECIFICATIONS

Product Model	D30-15EFG	D50-15EFG	D80-15EFG	D100-15EFG
Volume(L)	30	50	80	100
Rated Power(W)	1500	1500	1500	1500
Rated Voltage(ACV)	220-240V~	220-240V~	220-240V~	220-240V~
Rated Pressure(MPa)	0.75	0.75	0.75	0.75
Max Of WaterTemperature(°C)	80	80	80	80
Protection Class	I	I	I	I
Water Proof Class	IPX4	IPX4	IPX4	IPX4

EN

PRODUCT OVERVIEW

Product

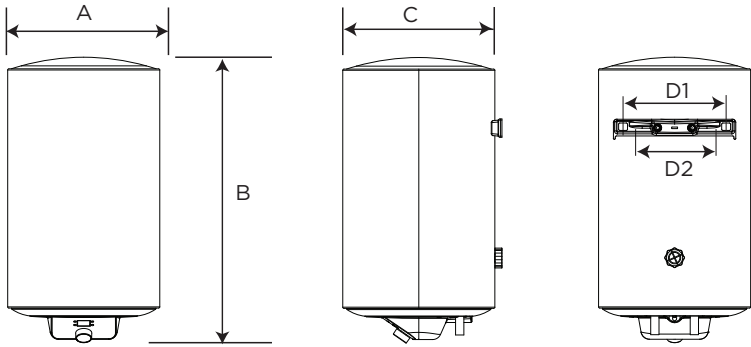


	30L	50L	80L	100L
A	340	385	450	450
B	580	715	745	895
C	340	385	450	450
D1	278	278	278	278
D2	130-310	130-310	130-310	130-310

(Note:All dimensions are in mm)


Internal Wire Diagram

EN

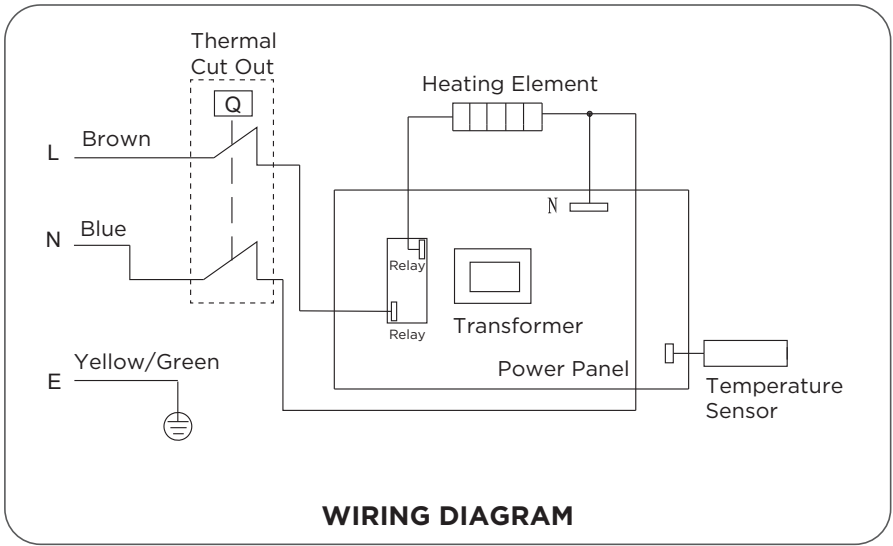

Accessories

Safety valve × 1

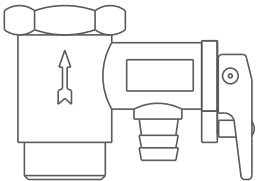

Wall hanging screw × 2



Plastic expansion pipe × 2




QUICK START GUIDE

Before First Use

CAUTION

Fill the inner tank with water before use.

1. Plug in

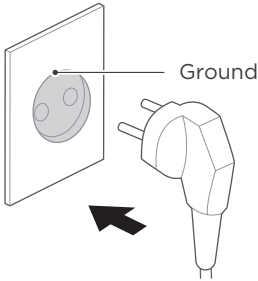

2. Rotate the thermostat knob clockwise to adjust the temperature inside the water heater.



3. When the water temperature reaches the adjusted temperature, the heating will be stopped, and the heating indicator will be off. When the water temperature drops to a certain temperature, it will automatically resume heating.



4. Open the water outlet valve, you can use hot water.

EN

PRODUCT INSTALLATION

Installation Instruction


EN

1. This electrical water heater shall be installed on a solid wall. If the strength of the wall cannot bear the load equal to two times of the total weight of the heater filled fully with water, it is then necessary to install a special support.
In case of hollow bricks wall, ensure to fill it with cement concrete completely.
2. After selecting a proper location, determine the positions of the two install holes used for expansion bolts with hook (determined according to the specification of the product you select). Make two holes in the wall with the corresponding depth by using a chopping bit with the size matching the expansion bolts attached with the machine, insert the screws, make the hook upwards, tighten the nuts to fix firmly, and then hang the electric water heater on it. (see Fig.2).



※ When the second hanging plate is used for installation, it is preferred to install in the hole (Dimension: D1). If it is installed in the lower part (dotted line position), it is necessary to confirm whether it is firm after completion (Dimension: D2)

3. Install the supply socket in the wall. The requirements for the socket are as follows: 250V/10A, single phase, three electrodes. It is recommended to place the socket on the right above the heater. The height of the socket to the ground shall not be less than 1.8m (see Fig.3).

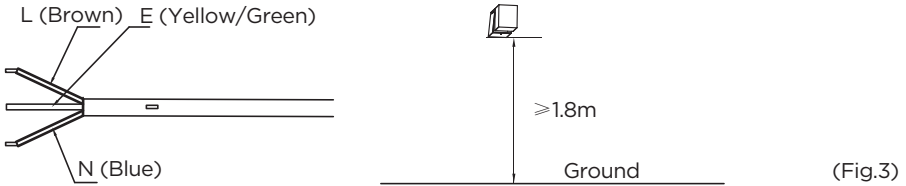


4. If the bathroom is too small, the heater can be installed at another place without sun-scorched and rain-drenched. However, in order to reduce the pipeline heat losses, the installation position of the heater shall be closed to the location shall be as near as possible to the heater.

Pipelines Connection


1. The dimension of each pipe part is G1/2" ; The massive pressure of inlet should use Pa as the unit; The minimum pressure of inlet should use Pa as the unit.

2. Connection of pressure relief valve with the heater on the inlet of the water heater.
3. In order to avoid leakage when connecting the pipelines, the rubber seal gaskets provided with the heater must be added at the end of the threads to ensure leak proof joints (see Fig.4).

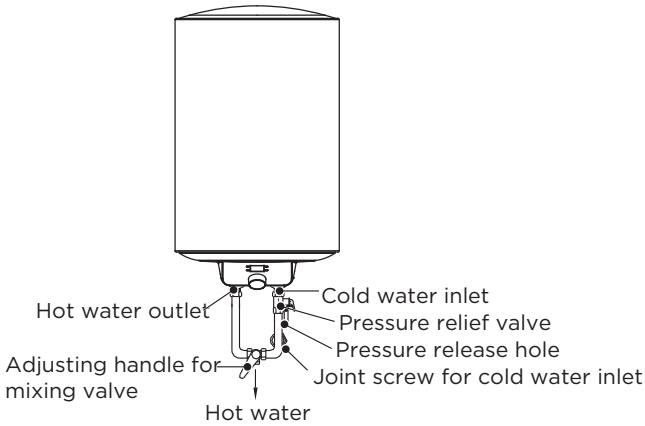

(Fig.4)

4. If the users want to realize a multi-way supply system, refer to the method shown in fig.5 for connection of the pipelines.

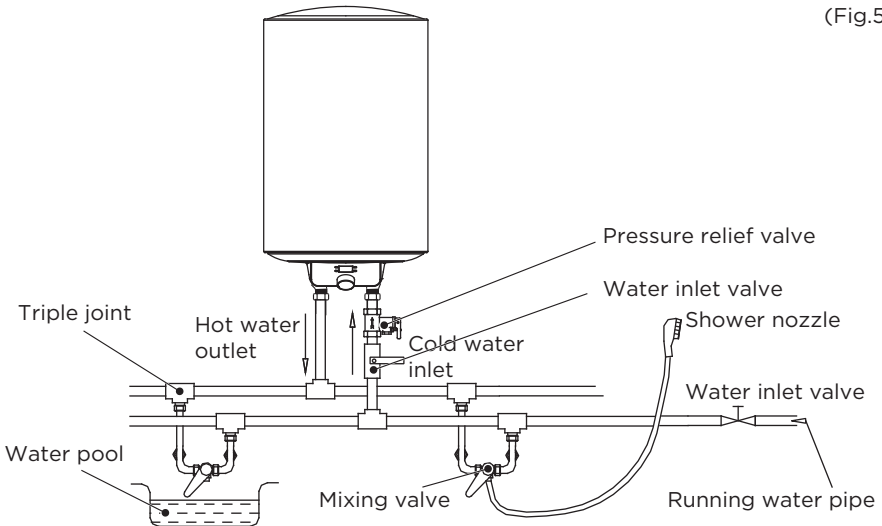

(Fig.5)

Note

Please be sure to use the accessories provided by our company to install this electric water heater. This electric water heater can not be hung on the support until it has been confirmed to be firm and reliable. Otherwise, the electric water heater may drop off from the wall, resulting in damage of the heater, even serious accidents of injury. When determining the locations of the bolt holes, it shall be ensured that there is a clearance not less than 0.2m on the right side of the electric heater, to convenient the maintenance of the heater, if necessary.

OPERATION INSTRUCTIONS

Methods of using

1. First, open any one of the outlet valves at the outlet of the water heater, then, open the inlet valve. The water heater gets filled with water. When water flows out of the outlet pipe it implies that the heater has been filled fully with water, and the outlet valve can be closed.


EN


Note






During normal operation, the inlet valve shall be always kept open.

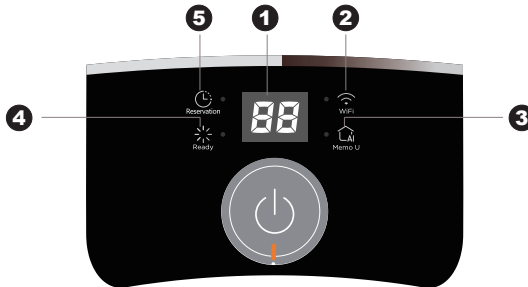2. Insert the supply plug into the supply socket, the two indicator lights will light up this time.
3. The thermostat will automatically control the temperature. When the water temperature inside the heater has reached the set temperature, it will switch off automatically, when the water temperature falls below the set point the heater will be turned on automatically to restore the heating.

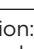Operation Of The Unit



Press	ON/OFF Turn the unit on or off.	
Rotate clockwise	Temp.: • Increases temperature in 1°C increments. • Max. temp. is 80°C.	When the temp. is adjusted, light 1 88 changes accordingly. If the temperature adjustment is stopped, a flash occurs for 3 s. After that, the value returns to the current outlet water temp.
Rotate counterclockwise	• Decreases temperature in 1°C increments. • Min. temp. is 30°C.	When the temp. reaches setting, icon 4  is on.
Press for 3 S in on state	Wireless Connection: Icon 2 starts to flash. Then refer to "APP SETUP AND OPERATION".	

<p>Press for 3 S in off state</p>	<p> MEMO U Function : Icon 3  lights up, and the MEMO U function starts. When Memo U function is on, it analyzes your hot water consumption and keeps it at 75°C for the first week. It then starts to set your hot water schedule based on your regular routine from the next week. If you press the knob again (in off state) or manually adjust the set temp on the water heater, the MEMO U function will be automatically turned off. But in APP, it does not allow to adjust temp during Memo U function is on, unless to turn off this function. If power off, turn off, or cycle through to other functions, the MEMO U function is disabled and the related date writing is cleared. Need to press the knob for 3 S in off state to learn again. MEMO U cannot be executed in the mode of repeated appointments.</p>
<p>Other functions only in-APP</p>	<p>Appointment: Set hot water READY for a certain period. When appointments is active in APP, icon 5  on the water heater panel will be on. MEMO U cannot be executed in the mode of repeated appointments.</p> <p> Mega Water: With a newly designed structure and temp. set to 80°C, 18%* more hot water is available. When Mega Water Mode is on, cannot adjust the temp. Should turn off this mode before adjusting the temp.</p> <p> Sterilization Function : Extra heat up to 80°C lasting 5 mins; and after that returns to previous setting temp. ⚠️ Cautions! Beware of scalding when the Sterilization Function is on.</p>

Alarm and fault self-test

In case of dry burning fault, overtemperature fault, sensor open circuit or short circuit fault, the nixie tube on the display screen flashes E2, E3 and E4 respectively, and other nixie tubes and indicators do not display. If there is a buzzer, it is accompanied by 6 short beeps. At this time, all relays are disconnected and all keys do not work. After the fault is removed and powered on again, the water heater returns to shutdown state. In the power on state, the system will automatically perform self inspection. If there is a fault, the corresponding fault code will be displayed, and the system cannot work (i.e. the water heater cannot be started).

- Judgment of dry burning fault: when starting heating each time, heat it for 30 seconds. After 120 seconds, if the temperature rise is less than 4 degrees, heat it normally, and no dry burning will be judged within 30 minutes; If the temperature rises by 4 degrees or more, stop heating, wait for 150 seconds and repeat the previous process. It is judged as dry burning if the temperature rises by 4 degrees or more for three consecutive times, and the display flashes with the fault code "E2".
- Overtemperature fault determination: when the temperature of the tank temperature sensor exceeds 90 °C, it is determined as overtemperature, and the display screen flashes and displays the fault code "E3".
- Sensor fault determination: alarm when the sensor is open circuit or short circuit, and the fault code "E4" flashes on the display screen.


CLEANING AND MAINTENANCE

Warning

Before doing any maintenance, please cut off the power supply.

EN

1. Check the power plug and outlet as often as possible. Secure electrical contact and also proper grounding must be provided. The plug and outlet must not heat excessively.
2. If the heater is not used for a long time, especially in regions with low air temperature (below 0°C), it is necessary to drain water from the heater to prevent damage of the water heater, due to water freezing in the internal tank. (Refer Cautions in this manual for the method to drain away the water from the inner container).
3. To ensure long reliable water heater operation, it is recommended to regularly clean the internal tank and remove deposits on the electric heating element of the water heater, as well as check condition (fully decomposed or not) of the magnesium anode and, if necessary, replace it with a new one in case of full decomposition. Tank cleaning frequency depends on hardness of water located in this territory. Cleaning must be performed by special maintenance services. You can ask the seller for address of the nearest service center.
4. The water heater is equipped with a thermal switch, which cuts off power supply of the heating element upon water overheating or its absence in the water heater. If the water heater is connected to the mains, but water is not heated and the indicator doesn't light up, then the thermal switch was switched off or not switched on. To reset the water heater to the operating condition, it is necessary to:
 1. De-energize the water heater, remove the plate of the side/lower cover.
 2. Press the button, located at the center of the thermal switch, see Fig.6;
 3. If the button is not pressed and there is no clicking, then you should wait until the thermal switch cools down to the initial temperature.

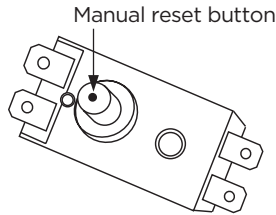

(Fig.6)

Warning

Non-professionals are not allowed to disassemble the thermal switch to reset. Please contact professionals to maintain. Otherwise our company will not take responsibility if any quality accident happens because of this.

TROUBLESHOOTING

Failures	Reasons	Treatment
The heating indicator light is off.	Failures of the temperature controller.	Contact with the professional personnel for repair.
No water coming out of the hot water outlet.	1. The running water supply is cut off.	1. Wait for restoration of running water supply.
	2. The hydraulic pressure is too low.	2. Use the heater again when the hydraulic pressure is increased.
	3. The inlet valve of running water is not open.	3. Open the inlet valve of running water.
The water temperature is too high.	Failures of the temperature control system.	Contact with the professional personnel for repair.
Water leak.	Seal problem of the joint of each pipe.	Seal up the joints.

EN

Note

Parts illustrated in this use and care manual are indicative only, parts provided with the product may differ with illustrations. This product is intended for household use only. Specifications are subject to change without notice.

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

Midea logo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

EN

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.


All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DISPOSAL AND RECYCLING

Important instructions for environment

Compliance with the WEEE Directive and Disposing of the Waster Product:
This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

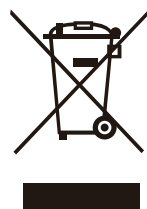


Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

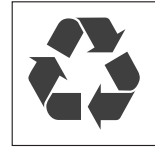

EN

DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**. To find further information, please follow the QR Code.



make yourself at home



www.midea.com

Warranty terms

1. Warranty period:

The warranty period for the water heater and all its components (including all electronic parts, but excluding consumable parts such as: anode and safety valve) is 5 years from the date of purchase, subject to the exceptions noted below. This warranty applies to Midea water heaters purchased in the following countries: Estonia, Latvia, Lithuania. In Finland and Sweden there is a standard 2 year warranty.

After the expiration of the standard two-year warranty period provided by law, the product becomes subject to an extended warranty, valid for a further 3 years under the conditions specified by the Importer. During the 3-year period after the standard 2-year warranty, warranty obligations do not apply to the dismantling and installation of water heaters, transportation and other costs, but are limited solely to the repair of the product, replacement of the product with the same or similar in model and cost, or partial refund of the cost goods.

The extended 3-year warranty from the importer expires 5 years from the date of purchase. During the extended 3-year warranty, replacement or repair of the product will not extend the warranty period.

Additional information about the extended 3-year warranty from the Importer on the website: www.nordic-comfort.com

2. Installation and operation:

When installing a water heater, it is necessary to leave at least 0.2 m of free space between the water heater and another object so that the heating element of the water heater can be quickly and easily replaced. Otherwise, the cost of replacing the heating element may not be covered by the warranty if the technician has to perform additional steps to replace the heating element (removing the water heater, etc.).

3. Maintenance requirements:

To maintain the free warranty, the water heater must be descaled/cleaned once a year if the water hardness value exceeds 4 mEq/L. Failure to do so may void the warranty if calcium deposits are found in the tank or heating element when the boiler fails.

The importer is not responsible for damage caused by exposure to hard water and scale formation. It is recommended to use water softeners for all water supplies in the apartment/house to prevent scale formation.

4. Warranty Disclaimer:

The importer has the right to refuse warranty service if he discovers a violation of the warranty terms or if the damage is caused by improper installation or operation of the water heater, which contradicts these instructions.

5. Warranty claims procedure:

To claim under warranty, you must contact an authorized service center with a receipt confirming the purchase of the water heater, the product serial number and a brief description of the problem.

Attention! If you have a problem with your water heater, first contact your warranty service and use their recommendations. Before this, it is prohibited to remove the water heater from the wall and send it to a store or service center, in which case the free warranty may be void.

Attention! The warranty does not cover consumable parts such as anode and safety valve.

Warranty centers:

Lithuania: www.helpgroup.lt,

Latvia: www.helpgroup.lt, +371 6622 21 87

Estonia: POS Elektroonika OU, +372 6460093, remont@pos.ee

Finland, Sweden: Contact the store where the product was purchased.

Important information for the consumer!

To ensure reliable operation of the water heater in hard water conditions (water hardness value above 4 mEq/l), we recommend regularly descaling. This not only extends the life of the water heater, but also ensures that it operates energy-efficiently. Otherwise, the heating element will heat the scale deposits instead of the water, so you will get less hot water but waste more electricity.


Use Your Appliance with the SmartHome App

Before you start, make sure that:

- 1.Your smartphone is connected to home wifi network, and you know the network password.
- 2.Make sure you are next to home appliances.
- 3.The 2.4GHz (preferable) or 5GHz band wireless signal is enabled on your wireless router.


1 Download SmartHome App

Scan the QR code below, or search for "SmartHome" in Google play(Android devices) or App Store(ios devices) to download the app.




2 Register or Login account

Open the App and create a user account, if you already have one, just log in.




3 Add your appliance

Tap the "+"icon to add home appliance to your SmartHome account.



4 Connected to the network

Follow the instructions in the app to set up the WiFi connection. If the network connection fails, please refer to the App tips for operation.



WiFi Status Light

	Slowly flashing	Waiting for connection
	Quickly Flashing	Connecting
	Quickly flashing solid	Connected to your wireless router

Notes on networking


- When networking the product, please make sure that the mobile phone is as close as possible to the product.
- According to the App tips, if the product only supports 2.4GHZ wifi communication, please note that the 2.4GHZ network is selected for connection.
- Midea recommends WiFi router SSID names contain only alphanumeric values. If special characters, punctuation marks or spaces are used it might prevent the SSID name from showing up in the available networks to join in the App. Try it and if the SSID shows up then it is ok to use, otherwise log into the router and change the SSID name.
- A large number of devices on the WiFi router can affect network stability, there is no way that Midea can advise a specific number limitation as this depends on router quality and many other factors.
- If the router or WiFi name and WiFi password change, please repeat the above process to reconnect to the network.
- As the product technology is updated, the content of SmartHome may change, and the actual display in SmartHomeApp shall prevail.

Connecting Your Device to Amazon Alexa and/or Google Assistant


Your Midea device works with Alexa and/or Google Assistant.

Before you can use the voice control features with Midea appliance, please follow the steps below:


1 Make sure device connected with SmartHome App
Use the "SmartHome" app to setup the device for app control, you can follow the user guides of "Use Your Appliance with the SmartHome App" in product manual book.




2 Search for "SmartHome" Alexa skill/Google action
In the Amazon Alexa App Browse SKILL to search for "SmartHome" skill.
In the Google Home App, click "+" to set up device (Works with Google), and then search for "SmartHome" action.

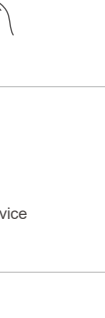

3 Enable "SmartHome"
Enable "SmartHome" Alexa skill/Google action, and then login your SmartHome App account in the H5 and agree the linking.

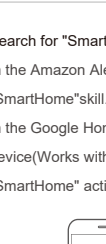

4 Try voice control with your devices
After setup is complete, try asking Alexa/Hey Google to control your Midea home appliance.



Things to Try

Available voice commands of your Midea device

Alexa	Google Assistant
1. Turn on/off the water heater/(Device name)	1. Turn on/off the water heater/(Device name)
2. Set the water heater/(Device name) to xxx degrees (temperature range xx-xx)	2. Set the water heater/(Device name) to xxx degrees (temperature range xx-xx)
.....